

# Press Release

Immediate release:

**Cambridge, UK, September 5<sup>th</sup> 2007**, Pico Technology Launches New Test Leads for Fuse Box Diagnostics

**The Fuse Extension Lead Set allows you to measure current and capture current waveforms directly from the vehicle's fuse box, saving valuable diagnostic time.**

The new Fuse Extension Lead Set is easy to use, and saves you from having to search the engine compartment for a suitable wire on which to fit a current clamp. You just remove the fuse from the fuse box, plug the fuse into the lead, and plug the lead back into the box. You can then place a current clamp from the Pico Automotive Diagnostics Kit around one of the two wires of the extension lead, and either capture a current waveform or simply measure the DC current being drawn by the component under test.

The set contains two leads: one for ATC-size fuses and one for mini-ATC size.

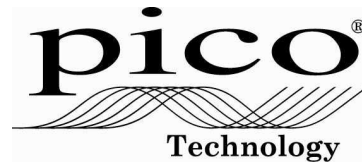


**Photo Caption above: Fuse Extension Lead Set**



**Photo Caption right: Pico Current Clamp and Fuse Extension Lead in use**

The PP408 Fuse Extension Lead Set is available immediately, either direct from Pico Technology or from one of its authorised distributors, at £29.50 + VAT. Read further information on the Pico Technology website at [www.picotech.com](http://www.picotech.com), or request details by calling +44 (0) 1480 396 395.



### **About Pico Technology**

Established in 1991, Pico Technology is a worldwide leader in the design, development and manufacture of high-performance PC Oscilloscopes. Pico Technology has used this success to produce the multi-award winning Automotive Diagnostics Kit. The kit is recognised as a leading diagnostic tool by vehicle manufacturers, the aftermarket and the commercial vehicle market. Pico's customer portfolio includes Aston Martin, Mazda, Iveco, Volvo, LDV Trucks and others.

Pico Technology prides itself on offering innovative, high-quality and affordable diagnostic solutions, designed and built under the ISO9001:2000 quality system. The company supports a network of distributors in over 60 countries worldwide who are helping to build and maintain its enviable reputation in the industry.

More information on Pico Technology can be found at **[www.picotech.com](http://www.picotech.com)**.

***Pico Technology Limited** and **PicoScope** are internationally registered trademarks of Pico Technology Limited.*

### **Please direct all editorial enquiries to:**

Jo Ager

Pico Technology Ltd

The Mill House

Cambridge Street

St Neots

PE19 1QB

UK

Tel: +44 (0)1480 396 395

Fax: +44 (0)1480 396 296

[jo@picotech.com](mailto:jo@picotech.com)